




# Replacing the Battery in an XL100

**WARNING: BEFORE REPLACING THE BATTERY, YOU MUST BACK UP ALL PARAMETERS. LOSS OF POWER TO THE XL200 CONTROLLER WILL CLEAR ALL PARAMETERS.**



*Figure 1 - Front of XL100*

1. Flip the controller so that it is face down.

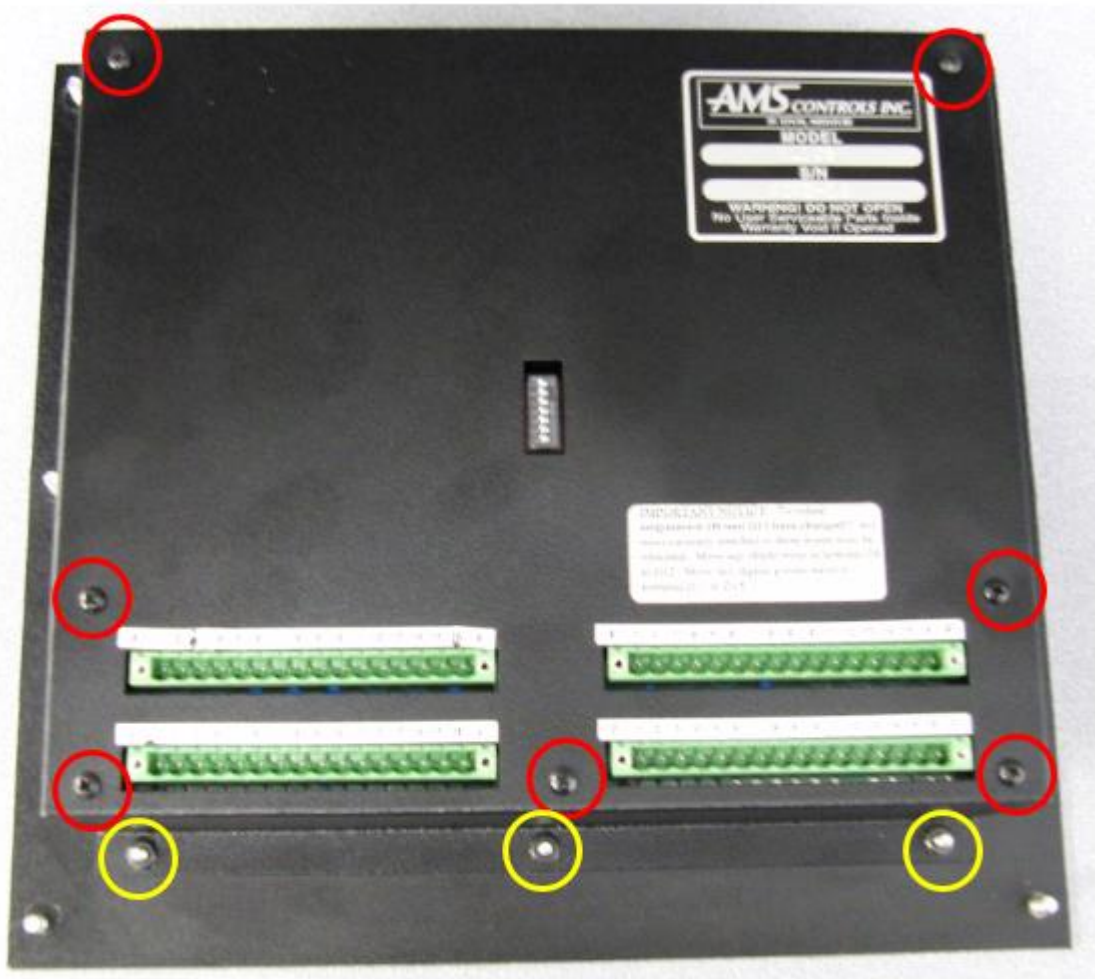

*Figure 2 - Back of XL100*

2. Remove the 7 screws circled in red in Figure 2
3. Remove the 3 nuts circled in yellow in Figure 2.


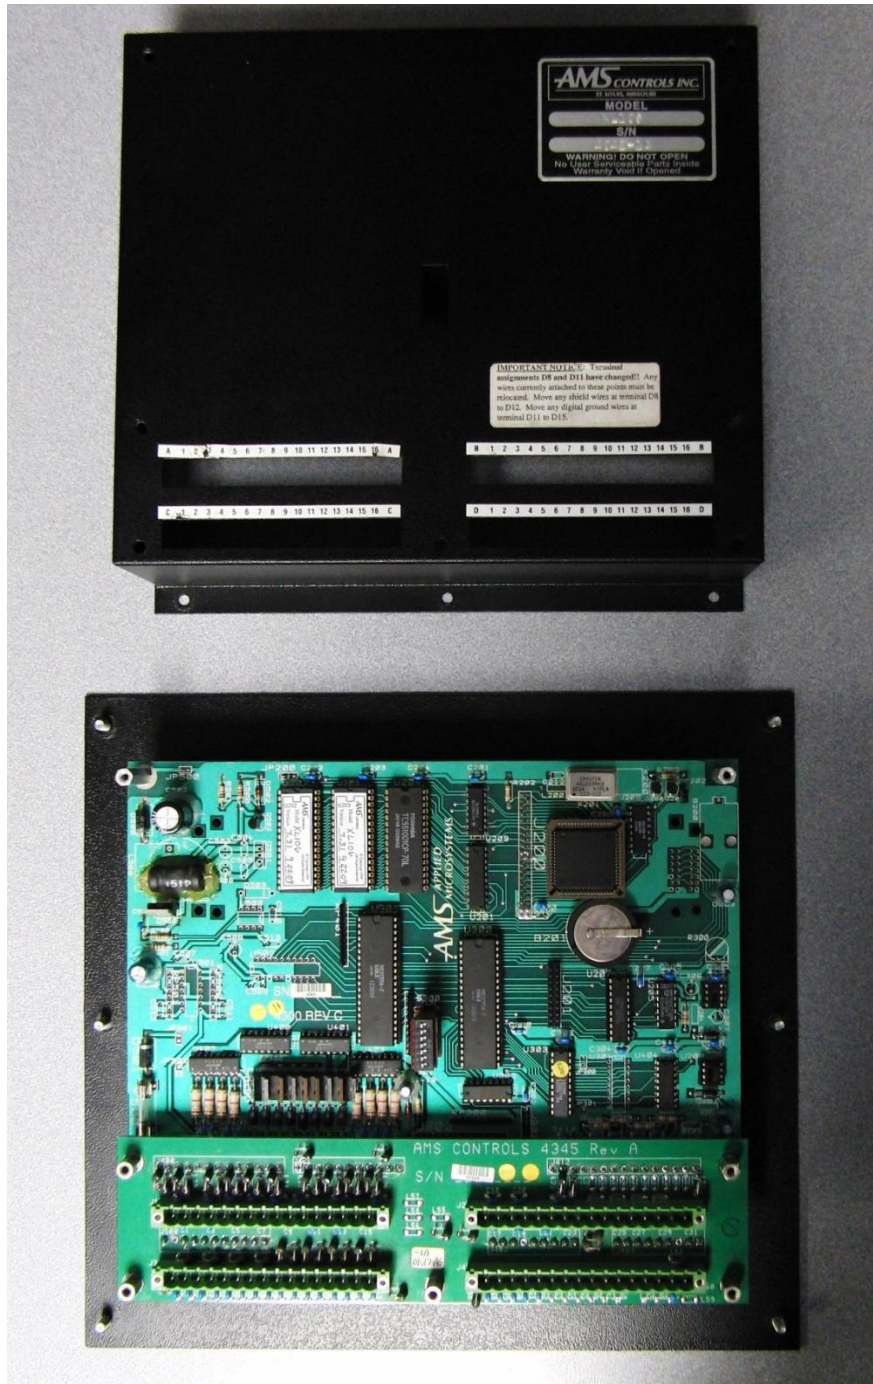


Figure 3 – XL100 with back cover removed


4. Remove the back cover from the XL100 as shown in Figure 3.



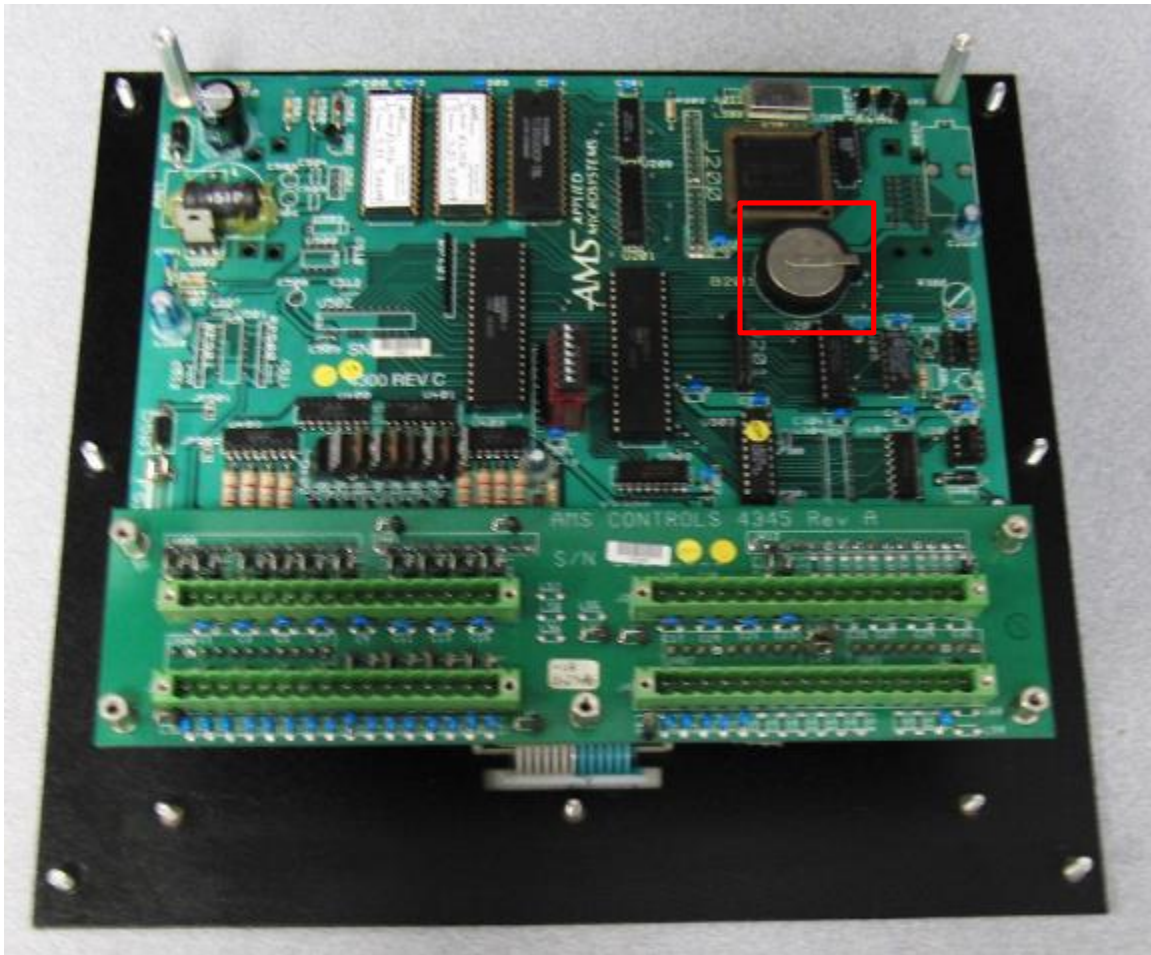

*Figure 4 - Back cover removed*

5. Locate the Panasonic CR2330 battery shown in Figure 4.
6. Press down on the right side of the battery until the left side raises up.
7. Grab the left side of the battery and pull it out to the left.

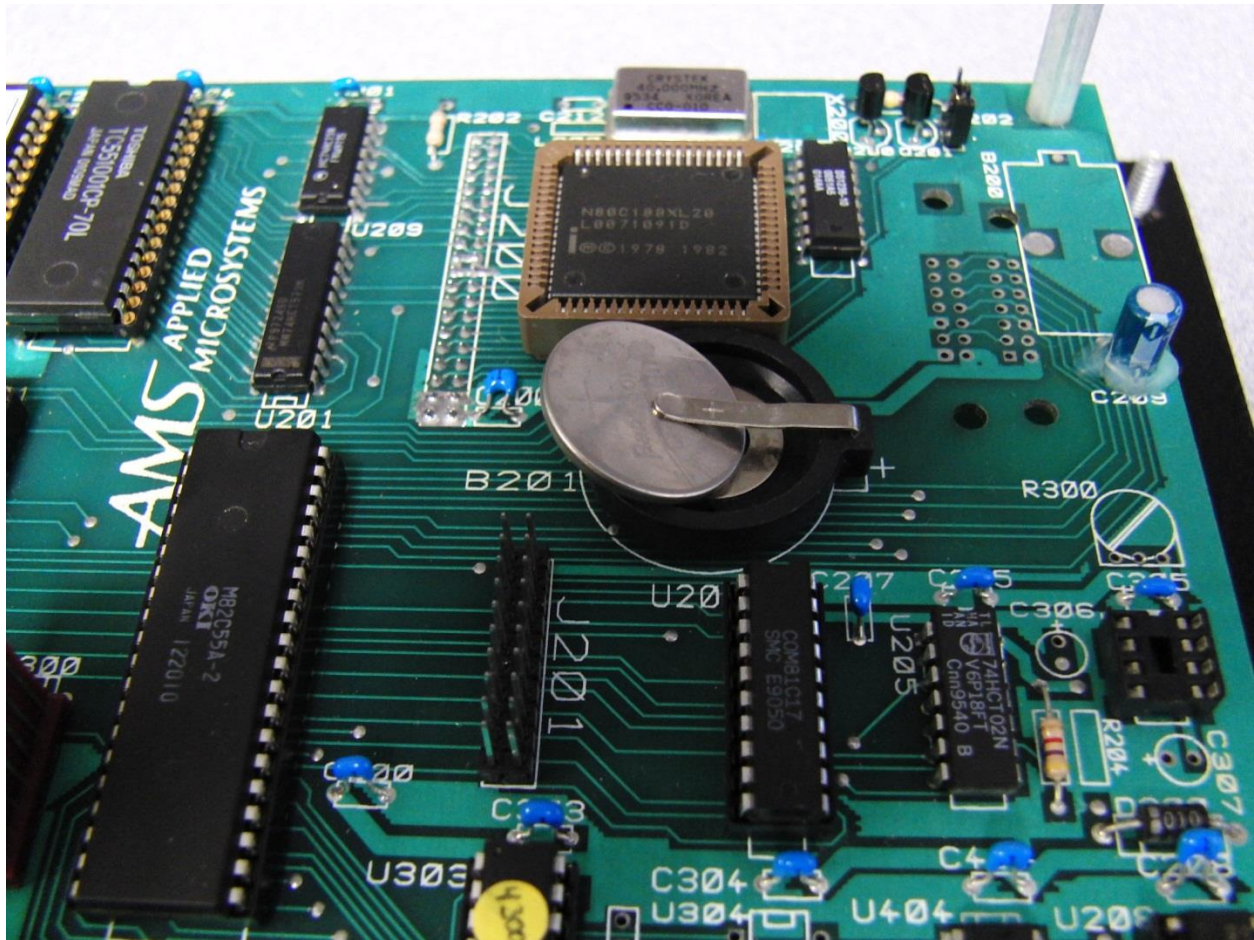

*Figure 5 - Battery partially removed*

8. Insert the new Panasonic CR2330 battery with the positive (+) side facing up by inserting it from the left side and sliding it under the clip until it snaps into place.
9. Place the back cover back over the XL100.
10. Put nuts and screws back into place.
11. Congratulations, you've successfully replaced the battery in your XL100.